


Drive Gate Instructions

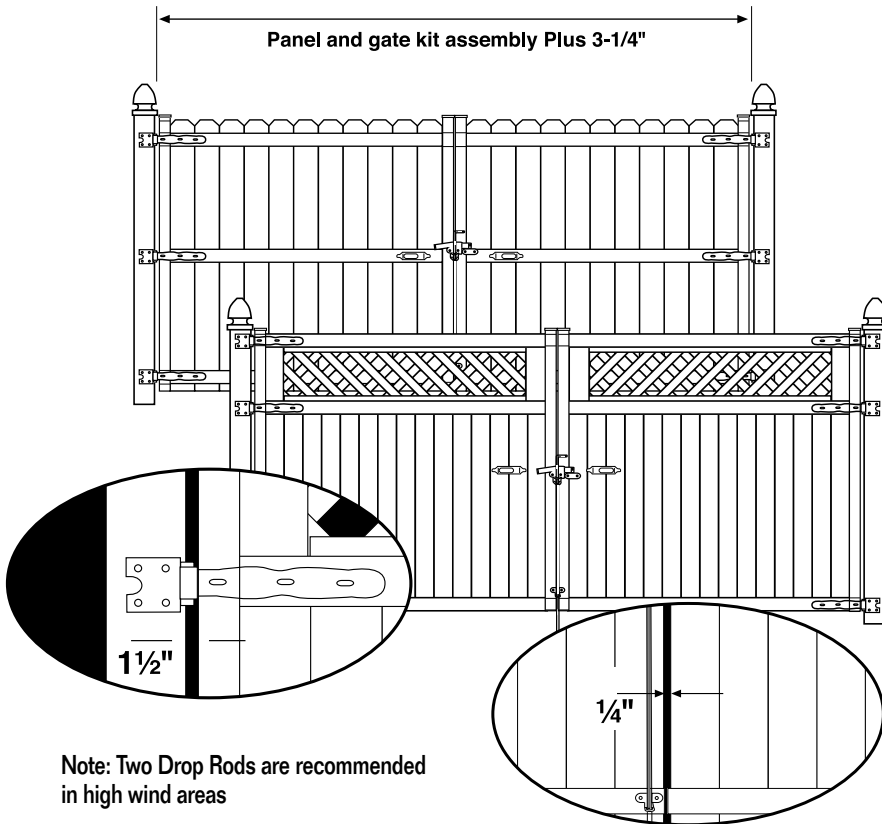


Note: Two Drop Rods are recommended in high wind areas

For Drive Gates Privacy and Semi-privacy Panels Only.

Drive Gates

- Drive gates are made from full fence panels
- Drive gate hinges and drop rods are offered for this application
- The opening in between the posts is the width of the two fence panels with gate kit assembled plus 3-1/4". (This allows for the hinges and drop rod)
- For openings less than two full fence panels, custom cut the panels to fit. Make sure to allow 3-1/4" for the hardware
- Drive gate posts must have a wood insert. Install a pressure treated 4x4 in the vinyl post. Keep the 4x4 flush to the hinge mounting corner of the post

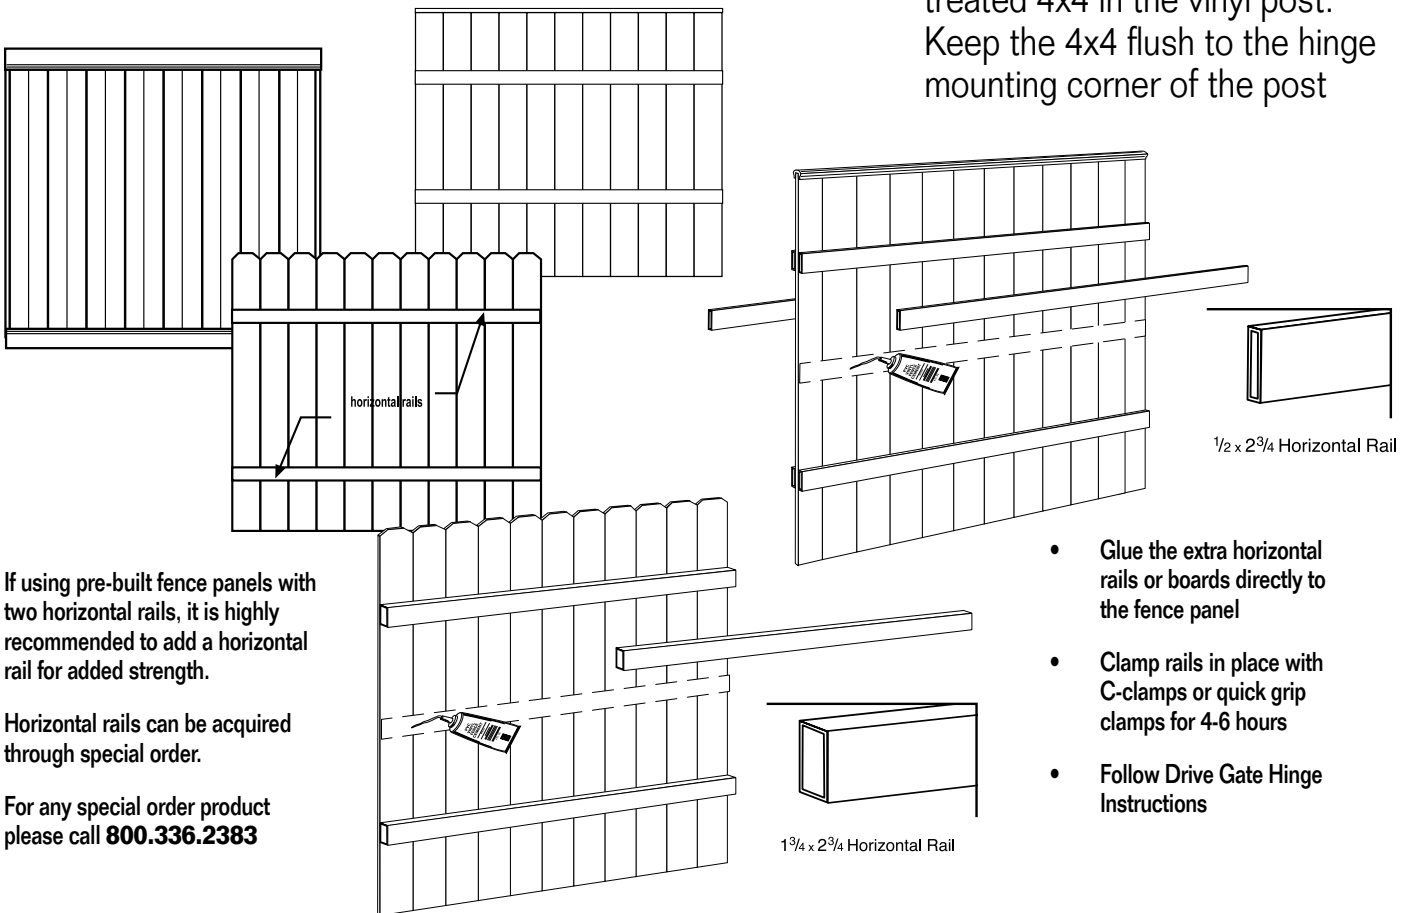

If using pre-built fence panels with two horizontal rails, it is highly recommended to add a horizontal rail for added strength.

Horizontal rails can be acquired through special order.

For any special order product please call **800.336.2383**

- Glue the extra horizontal rails or boards directly to the fence panel
- Clamp rails in place with C-clamps or quick grip clamps for 4-6 hours
- Follow Drive Gate Hinge Instructions