




## INSTALLING WITHOUT MOLDINGS

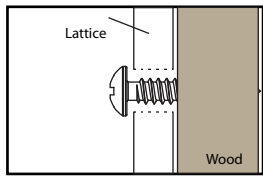


1. Pre-drill oversized holes through lattice (**drill the largest hole that screw head will allow without fitting through**). Center each screw in oversized holes and do not overtighten to allow for expansion and contraction of lattice

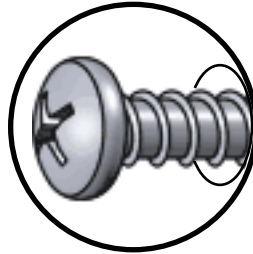


Center each screw in oversized holes.

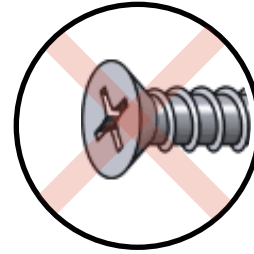

Do not use countersink screws.

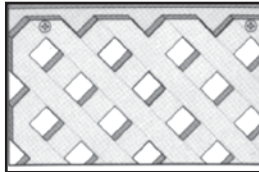


2. Hang the lattice with a support every 24". Attach sides and bottom loosely. (Do not tighten all the way)

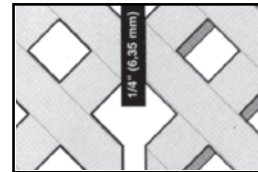


3. If using more than one panel, do not butt panels together. Leave 1/4" gap to allow for expansion and contraction


## INSTALLING WITH CAP & DIVIDER MOLDINGS

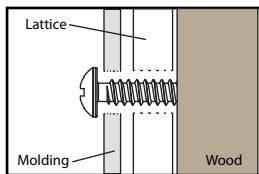


1. Pre-drill oversized holes through lattice and molding (**drill the largest hole that screw head will allow without fitting through**). Center each screw in oversized holes and do not overtighten to allow for expansion and contraction of lattice

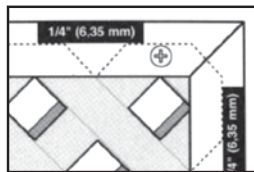

2. Along the top, drill and fasten every 24". Drill holes and hang through both molding and panel.


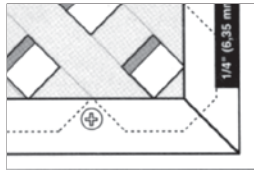


3. Along the sides and bottom, drill holes and put screws through molding only.

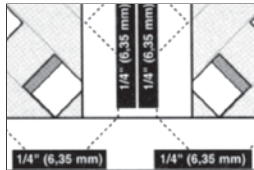

4. Allow a 1/4" gap on all sides for expansion with cap and divider moldings.


Use classic diamond, Privacy Diamond and privacy square lattice with classic molding only

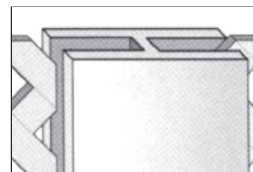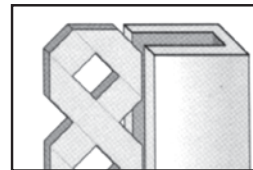

## IMPORTANT THINGS TO REMEMBER



If the lattice bows, loosen attaching screws, make sure you have allowed enough gap for expansion and contraction.

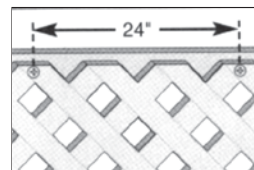

Place fasteners 24" apart.

**Do Not Use For Horizontal Installation**