
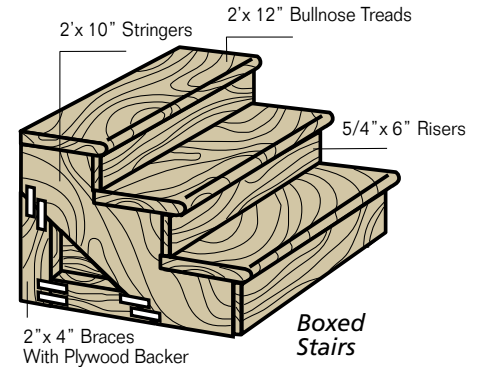


Stair & Step Stringer Installation

INSTRUCTIONS: For assembly of Pre-cut Boxed Stairs

1. Start by working on a clean surface or use a sawhorse. Cut 2" x 4" braces to line up with 2" x 10" stringer at a 90° angle. Nail together with #2 Scotch Fasteners, two (2) at each joint and both sides.
2. Cut two (2) 3/8" A.C. or Treated Plywood Backers large enough to overlap opening by 2". Nail to back side of stringer and 2" x 4" braces using 4D Galvanized box nails.
3. Stand both stringers into upright position. Nail the 2" x 12" Bullnose Treads to the top of the stringers allowing 1" overhang. Use 16D Casing nails.
4. Nail the 5/4" x 6" treated risers to the front of the stringers. (Front of steps). Use 8D Galvanized box nails.
5. Attach the 2" x 4" braces with Plywood Backer to stringer using #2 Scotch Fasteners, two (2) at each joint and both sides.

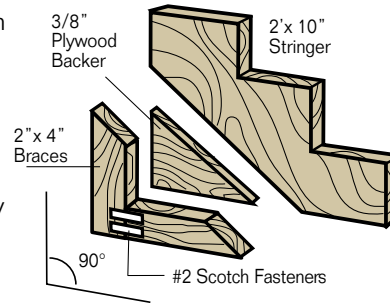

NOTE: For steps over 4' long, an additional stringer should be installed in the middle.

