



# Wood Railing Installation Instructions

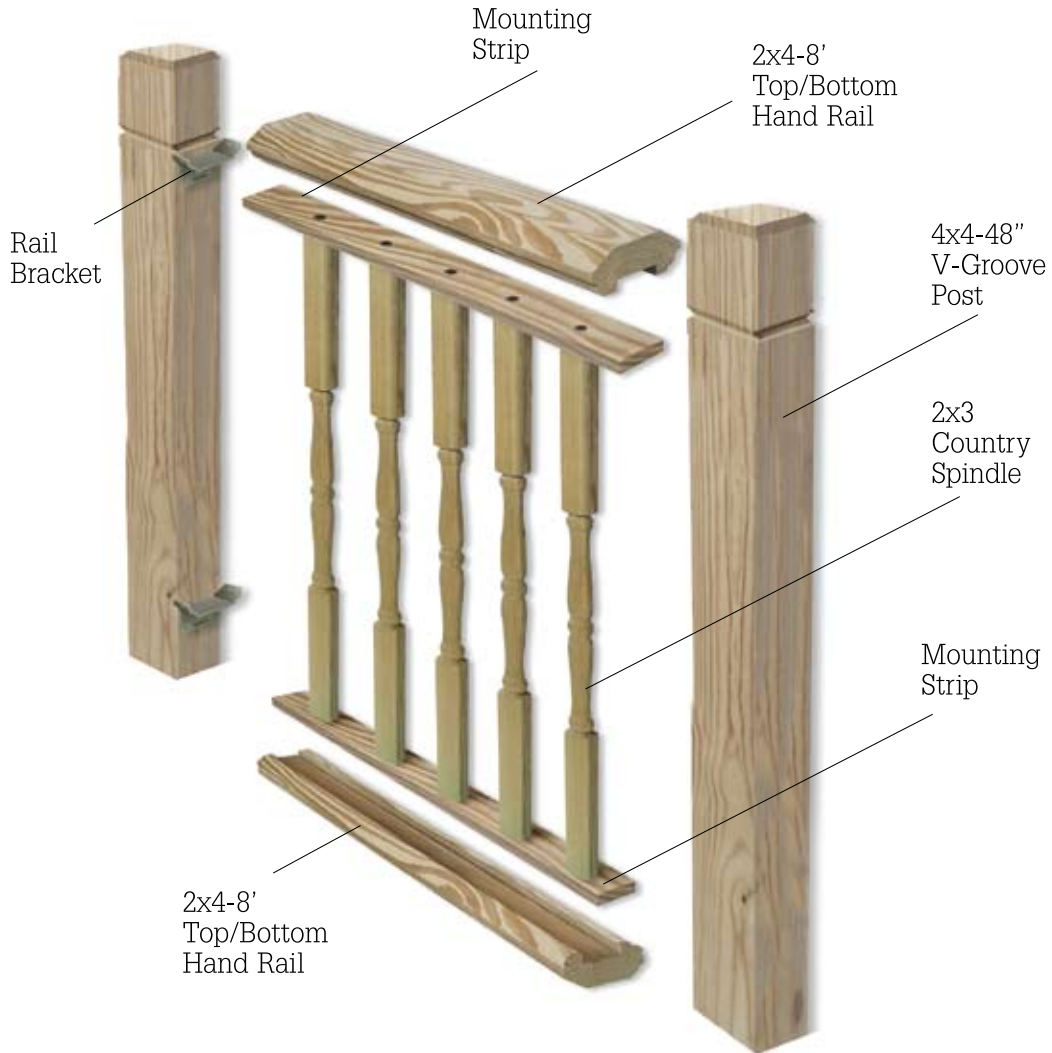


## Rail Construction


Determine the distance between your deck posts. Cut top rail, bottom rail and mounting strips to that length. Spacing of balusters or spindles below is recommended by B.O.C.A. Specifications. Maximum spacing should be 4" at the narrowest point of the spindle.

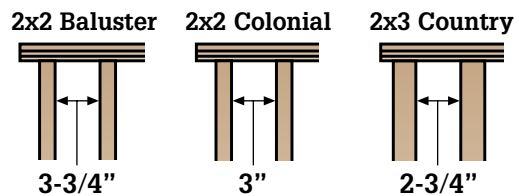


Use a block of wood to space balusters or spindles.

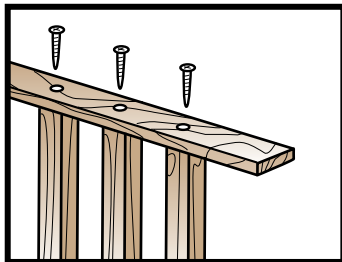

1. Attach Spindles or Balusters to the mounting strip with screws.

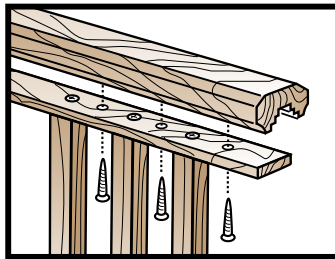

2. Place the handrail on the mounting lath and attach from below.

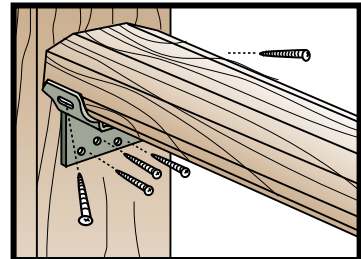

3. Attach hand rail bracket to post with screws and through the rail into the post. It's that simple!